

---

**1.0****IST'S DIVING JUDGE'S SCORING CONSOLES**

---

IST's Diving Judge's Scoring Consoles allow diving judges to input their scores directly into IST's PC based timing systems. The Consoles plug into a Diving Interface which is connected to the Computer Timing Interface by a cable.

---

**1.1****Setting up the Diving Judge's Scoring Consoles**

---

**Refer to the photograph on the back for connecting the Consoles and Interface.**

Select a position on the pool deck where diving judges can see the diving board clearly. Plug the Diving Interface into a 120v GFI outlet near the selected location. Plug one end of the long cable that comes with the interface into any of the 8 "phone" jack connectors. Plug the other end of the cable into the Computer Timing Interface in the jack marked **Diving**. Now plug the cables from each of Consoles into the Interface in any of the remaining jacks. You can connect 2-7 Consoles into one Interface.

If you are using 5 or more judges, you may wish to divide them in to two groups on opposite sides of the pool. In this situation, you will need a second Diving Interface. Connect the long cable that comes with the Interface into any available jack in the first Interface and the other end in any jack in the second Interface. Now plug the Consoles into any of the remaining jacks. You can use up to 9 consoles total.

---

**1.2****Assigning Judge ID Numbers**

---

When the Consoles are plugged into the Interface, the LCD screen will briefly display a screen with IST's name and the Console Version Number. It will then go into the scoring screen. At the top of this display you will see **JUDGE ID# X**, where X is a number from 1-9 that was assigned to that module during final test. ***Each Console must have a unique Judge ID number and the numbers should be consecutive.*** These numbers will identify the judges' scores as they are stored by the diving software.

To change the Judge ID#, press the **Exit** key. Use the **Down Arrow** to select **SETUP PENDENT** on the screen, and press **Entr**. The screen will display:

**OLD JUDGE ID#:**  
X  
**NEW JUDGE ID#:**  
X

To change the ID#, press the appropriate number key. When the Judge ID# is correct press **Exit**. Press the **Up Arrow** to select **RUN SCORING**, and press **Entr**.

Instructions for entering scores are on the back of each console. Refer to your software's Help files for information on using the consoles with your software.

